

## ORIENTING THE SMART BOARD

---

Orientation will ensure that your touch is registered accurately when you use the SMART Board. The SMART Board should be oriented when the SMART Board is set up. However, there are times when the SMART Board has to be re-oriented. For instance, if the SMART Board is pressed with your finger and the cursor appears in a different area of the board, this is an indication that the board needs to be re-oriented. To orient the SMART Board, follow the directions below.

✚ Do one of the following:

- ✦ Click the **SMART Board** button (see illustration at right) on the **Task Bar System Pane** and then select **Orient** from the list of options.
- ✦ Click the **More** button on the **Start Center** and then select **Orient SMART Board**.
- ✦ Press the **two** pen tray buttons on the **SMART Board**.
  - ▣ These buttons are located to the left of the Keyboard and Mouse.
  - ▣ These two images are located to the left of the green **Start** button.



- ✚ The orientation should begin in the **upper-left corner** of the **SMART Board**.
- ✚ Press your finger squarely in the center of each red cross (see illustration at right) in the order indicated by the white, diamond-shaped background.

