

PLAYING VIDEOS

When using the SMART Board, it is possible to play videos. The Portable SMART Board has a video player attached. It is at the bottom of the cart.

- † Insert the video into the VHS or DVD player. The player is located under the SMART Board.
- † Press the **middle triangle shaped** button on the bottom row of the SMART Board next to the **Start** (green) button.
- † On the **Video Player**, click the button that says **VCR/DVD**.
 - ✦ The first time it is pressed, it will start the DVD player.
 - ✦ The second time it is pressed, it should start the VHS player.
- † VCR or DVD will be show in the display panel on the video player.
- † To start the video, press the **Play** button on the video player.
- † To adjust the volume for the sound, click the first set of buttons next to the **Start** (green) button.
 - ✦ The top button will increase the sound.
 - ✦ The bottom button will decrease the sound.
- † To discontinue playing the video, click the **Stop** button.
- † To insert or remove the DVD, press the **Open/Close** button.
- † To remove the VHS tape, press the **Eject** button.